


Leak Test Equipment

Checks showerhead assembly for leaks automatically

Shower Head Leak Test Machine

Simply load the shower head into machine fixture. Once the shower head is loaded, press the Banner buttons to start the machine. You must continue to hold the buttons until top clamp and seal are completely extended. Once the clamp and seal are extended the leak test will start.

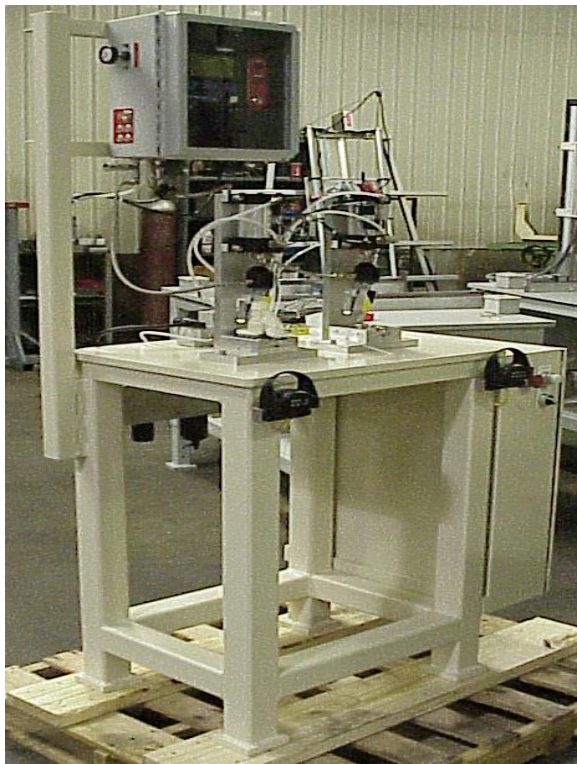

Upon completion of the test, if the shower head has no leaks, it will be marked and the clamp and seal will retract. If the shower head leaks the clamp and seal will stay extended until system is reset. Machine has a dual Uson pressure decay tester.