

Manual Press Snap System

ASSM-4 Manual 9 Head Press Snap System



General Description

Manual press snap system snaps together parts. When operating this machine, the operator manually loads the bottom part and the top part and then pushes it into the machine. The safety switches in the back are tripped, allowing for a cycle.

After pushing the part into the machine, the operator presses two start buttons to initiate a press cycle and holds the switches until part is snapped together. The Operator can then unload the assembly. It is an air logic machine.

