

Leak Test Equipment

Test-2, Checks showerhead assembly for leaks automatically

Shower Head Leak Test Machine

The shower head is loaded into machine fixture. Once the shower head is loaded, press the banner buttons to start the machine. The buttons must be continuously held until top clamp and seal are completely extended. Once the clamp and seal are extended, the leak test will start. If the shower head has no leaks, it will be marked, and the clamp and seal will retract. If the shower head leaks, the clamp and seal will stay extended until system is reset. Machine has a dual Uson pressure decay tester.

